

IMPORTANT **REMOVED BY OWNER BEFORE DOOR OPERATION**



Temporarily operating the door until permanent power is connected.

We recommend that the door be temporarily operated by live hydraulic power. The door is provided with pioneer type hydraulic nipples located on the hydraulic lines near the pump. Tractors or other hydraulic equipment can operate the door using these connections. Hydraulic connections should be left attached for the entire door cycle to prevent pressure buildup.

Not recommended, but if a generator must be used to supply temporary electrical power, **Only use a generator that can provide 10,000 watts.** Do Not starve the pump unit of electrical power by using undersized generators. This will adversely affect the lifetime of the power unit and **VOID YOUR WARRANTY.**

Connect permanent electrical power as soon as possible

ELECTRICAL WIRING SHALL BE INSTALLED BY AN ELECTRICAL CONTRACTOR AND MEET FEDERAL, STATE AND LOCAL CODES.

Both the pump and the remote control option can be wired by the same power supply. A **220v 30 amp breaker is required.** All wiring is completed using the color coded wiring located in the pump switch box.

Windows:

Windows installation is restricted to the following limitations: No window larger than 60"
No window taller than 48" No single pane of glass larger than 9' sq. feet. See the Installation Manual for all window requirements.

SAFETY You are responsible for the safe use of this product. Unsafe use could result in property damage, serious personal injury, serious injury to others or a fatality.


Do not operate the door until you understand all the safety instructions. If you have any questions, contact your door provider or go to www.powerliftdoors.com for assistance.

Recognize safety information and labels:


- The labels are located on the pump and at eye level at each door frame jamb.
- Understand the label's meaning and the potential risk it identifies
- Keep the labels in good condition
- Replace unreadable labels by contacting:
your door installer or info@www.powerliftdoors.com

Follow all safety instructions:

- Read and understand all safety, operation and maintenance instructions
- Allow only those persons who have read and understand the instructions to operate the door
- Turn off power when making electrical connections or conducting any electrical work
- Install all electrical connections per state and local codes
- Do not re-adjust or modify the settings completed by the door installer
- Avoid electrical shock by not operating controls with wet hands or standing on a wet surface
- Operate the door only for the door's intended purpose
- Inspect and verify that the area in the path of the door swing is free of equipment, vehicles or obstructions.
- Stay alert and watch attentively during the door's operation
- Keep fingers and extremities away from pinch points located between the door and door frame
- Keep children and pets away from the door while door is operating
- Maintain the door in good operating condition
- Wear safety glasses when using hydraulic connections
- If a remote control is ordered, do not leave the remote transmitter where unauthorized persons could operate the control

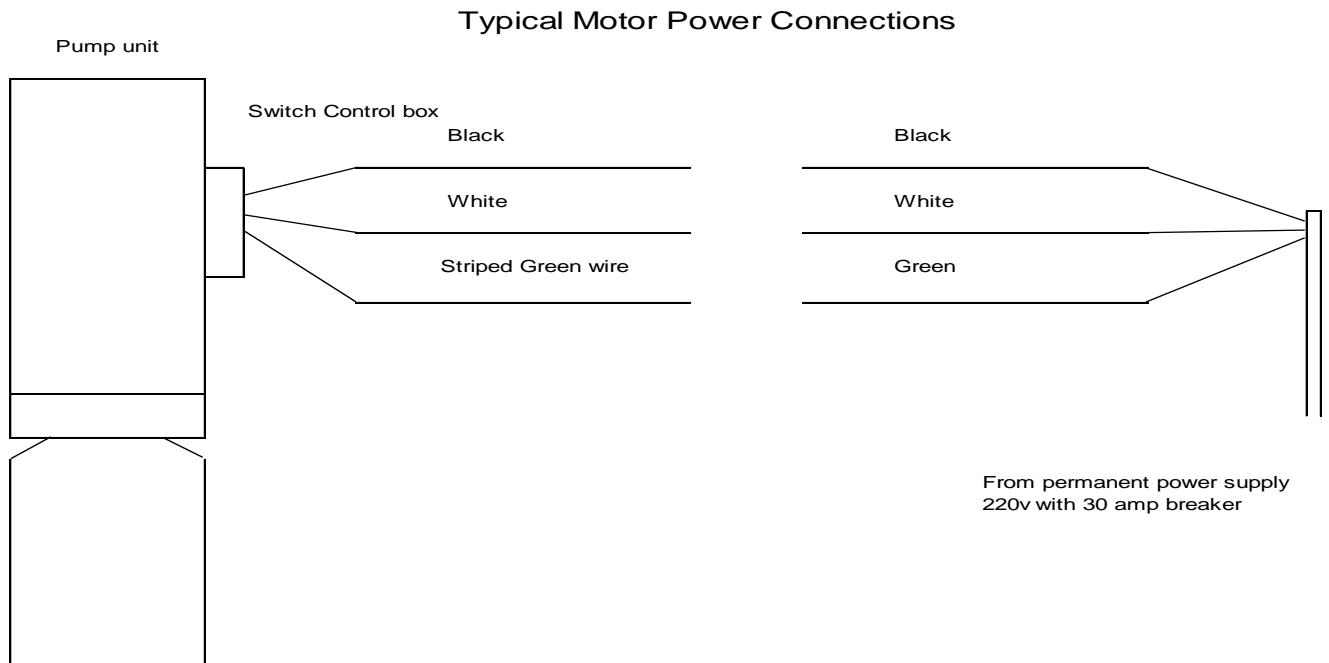

TYPICAL SIDE JAMB DETAIL

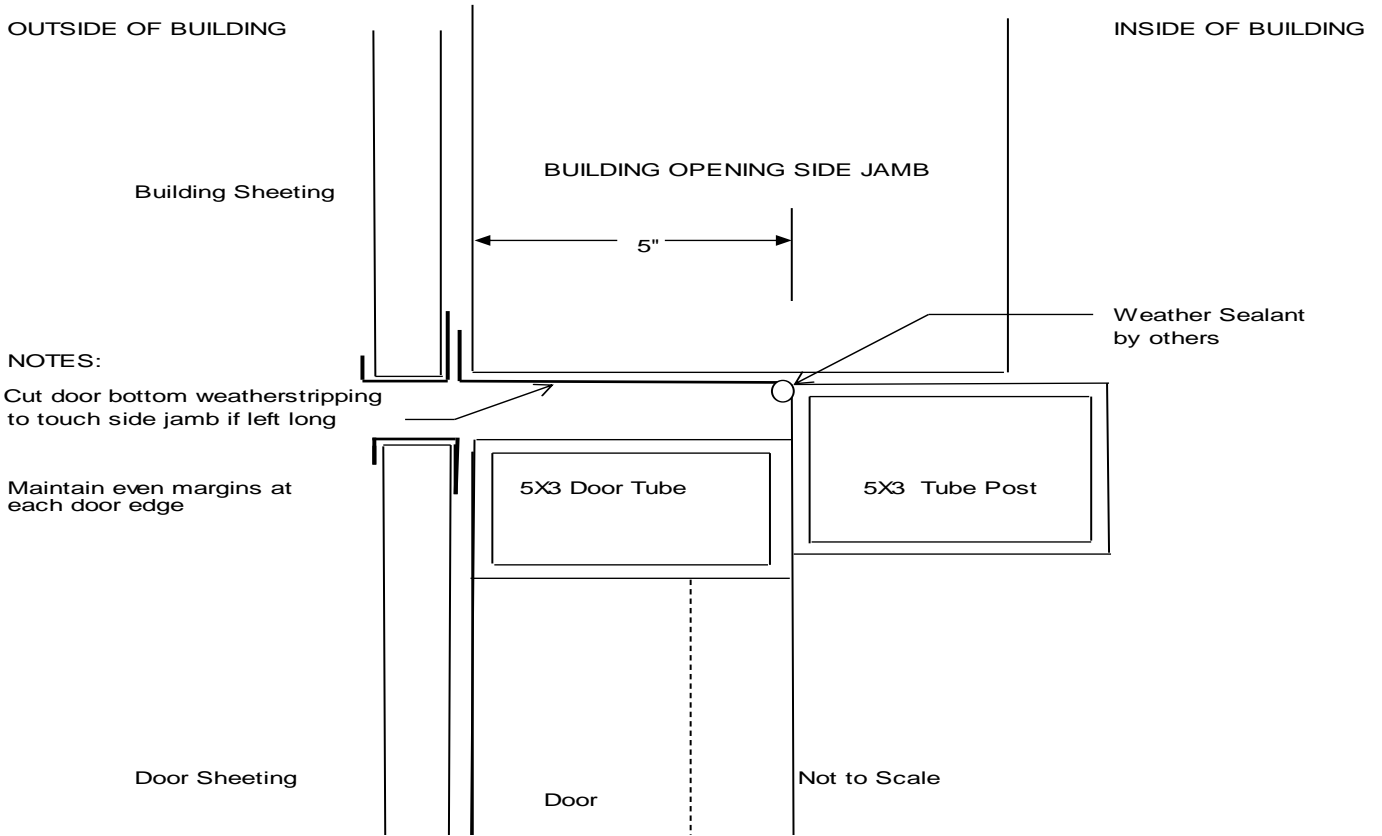

TYPICAL HEADER DETAIL

